

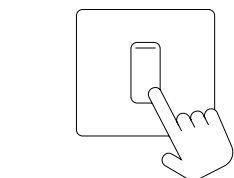



You Will Need

(not included)


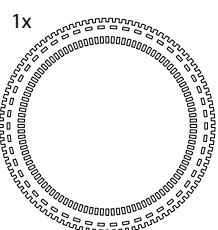


Turn the power off
before starting!


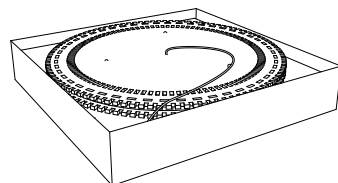


1 Before starting, please
read the guidance on
the back of this leaflet.


2 Breeze is Flat pack. Take the parts out of
the box for assembly

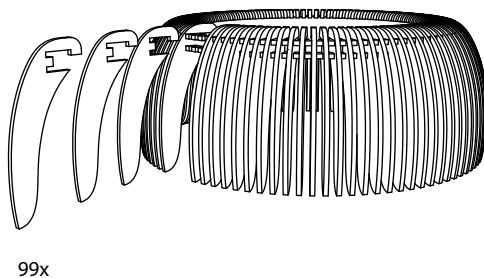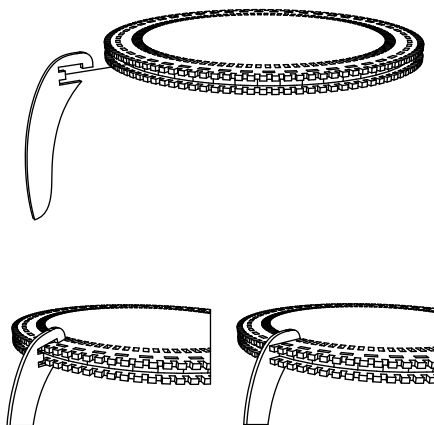

3 Assemble the slats into its frame shown in above diagram.
Finish all 120 parts until you will have your finished Breeze fixture

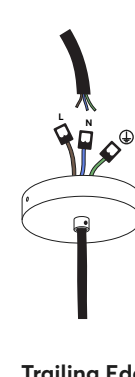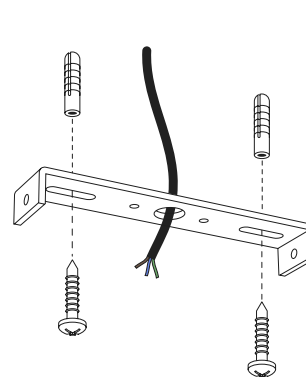


Trailing Edge

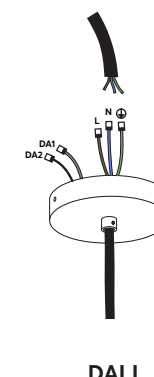



DALI

Strip the cable
8-12mm
www.wago.nl
(for more info)

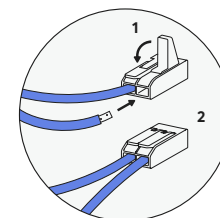

4 Drill holes and insert wall plugs.
Line up the bracket and screw
in place.

5 Strip 8-12mm of the cable
Insert the electrical cable into the
wago connector and flip closed.

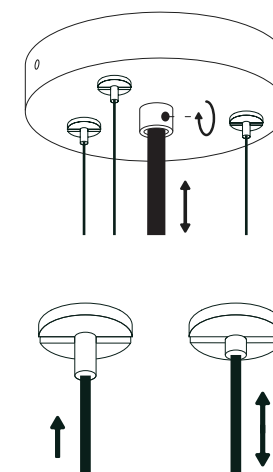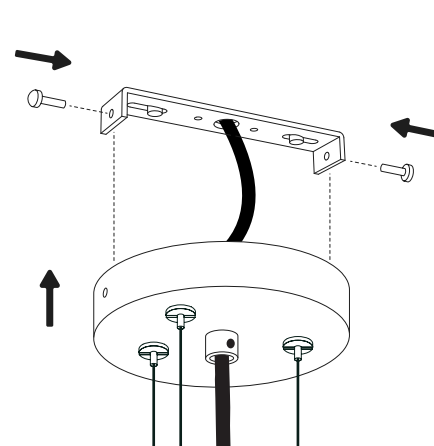

6 Connect the ceiling canopy to the bracket. Use side-screw to fine adjust the
cable. To adjust the length of the steel wires, press down to release the
tensioning cable. **Your light is now ready to use!**

Thank you for your purchase!

Please read this manual carefully to ensure a safe and correct install of your light.

- The manufacturer is not responsible for damage caused by incorrect installation.
- Always turn the power off before installation, carry out maintenance or repairs.
- If in doubt, contact a qualified electrician.
- Keep light away from liquid or flammable objects.
- When installing, make sure cables are not crushed, damaged or corroded.
- If a cable is damaged, it must be replaced by a trained professional.
- This product contains an integrated LED light source, which can only be replaced within its 2 year warranty.



Assembled inside box
Material: PET Felt
Ceiling Rose: Black Metal
Weight: 12.8KG
IP20


CCT: 3000/4000
Dimming: Trailing edge / DALI

lumēnear

Zoeterwoudseweg 21D • 2321 GM Leiden • The Netherlands
+31 (0)715352210 • info@lumenear.com • www.lumenear.com

lumēnear

Acoustic Lighting

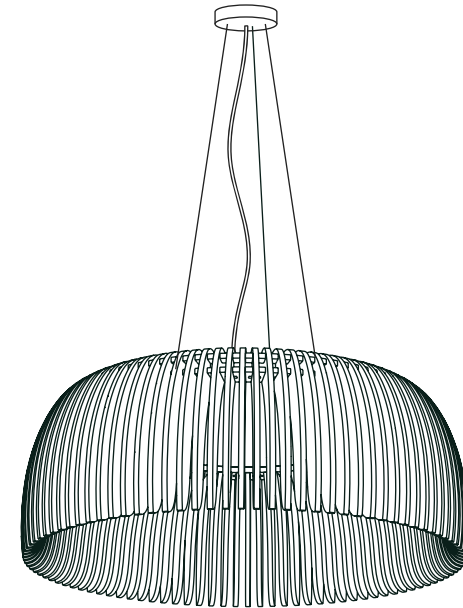

Breeze 800

Installation Guide